




Nokia Lumia 720 Coaxial Antenna Cable Replacement

Nokia Lumia 720 Coaxial Antenna Cable Replacement

Written By: ZFix

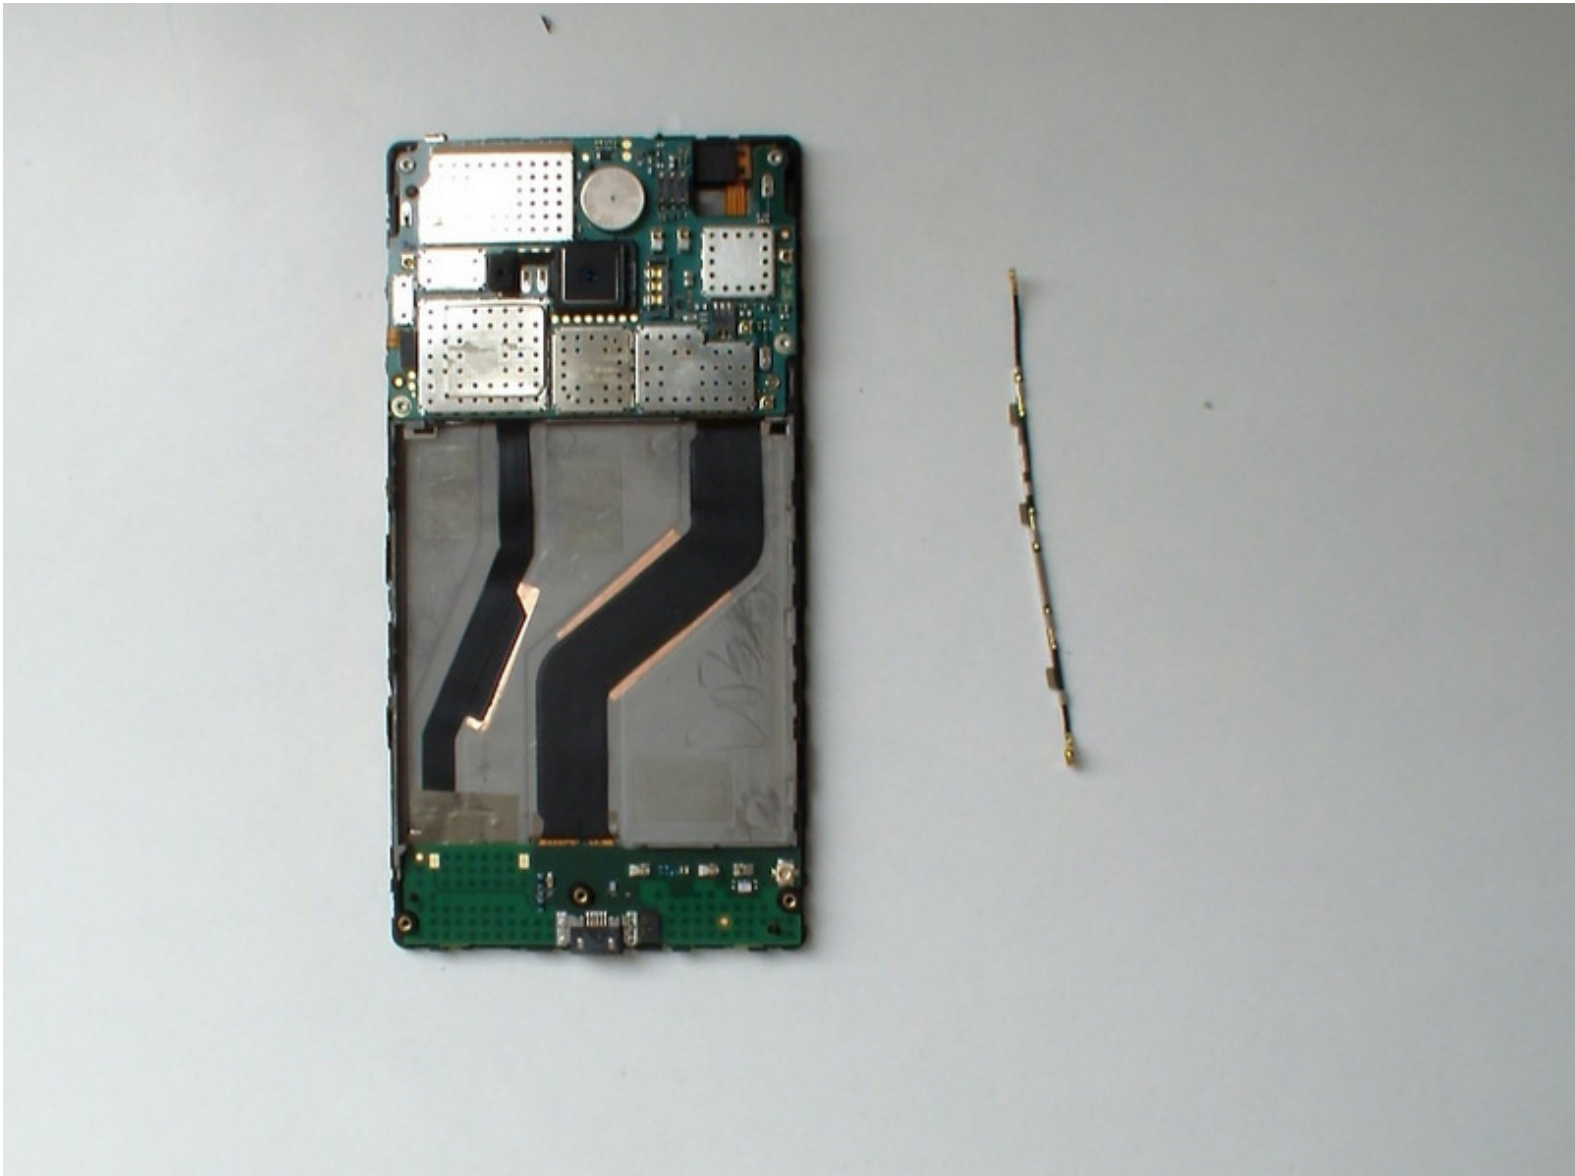

INTRODUCTION

Nokia Lumia 720 - How to replace Coaxial Antenna Cable.

[video: https://www.youtube.com/watch?v=wseNxvPm_po]



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [T2 Torx Screwdriver](#) (1)
 - [T4 Torx Screwdriver](#) (1)
-


Step 1 — BATTERY COVER - PART 1




- Remove the SIM card tray and the memory card try.
- Use a screwdriver Torx T2 and remove the screw under the SIM card tray.
- Use plastic tools and start the separating the back cover from the top side.

Step 2 — BATTERY COVER - PART 2

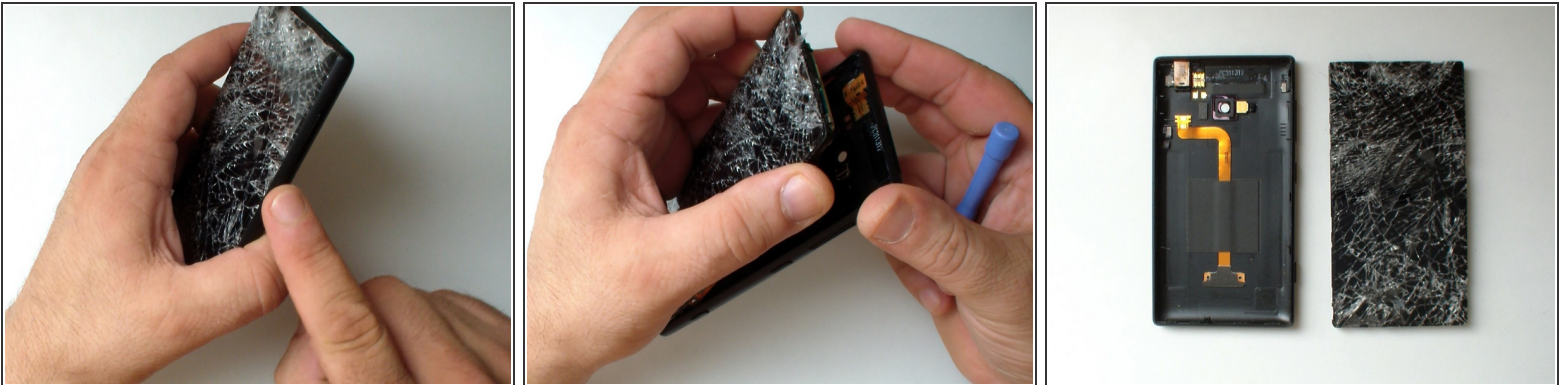


 Be careful with the volume buttons.

Step 3 — Loudspeaker & Antenna module

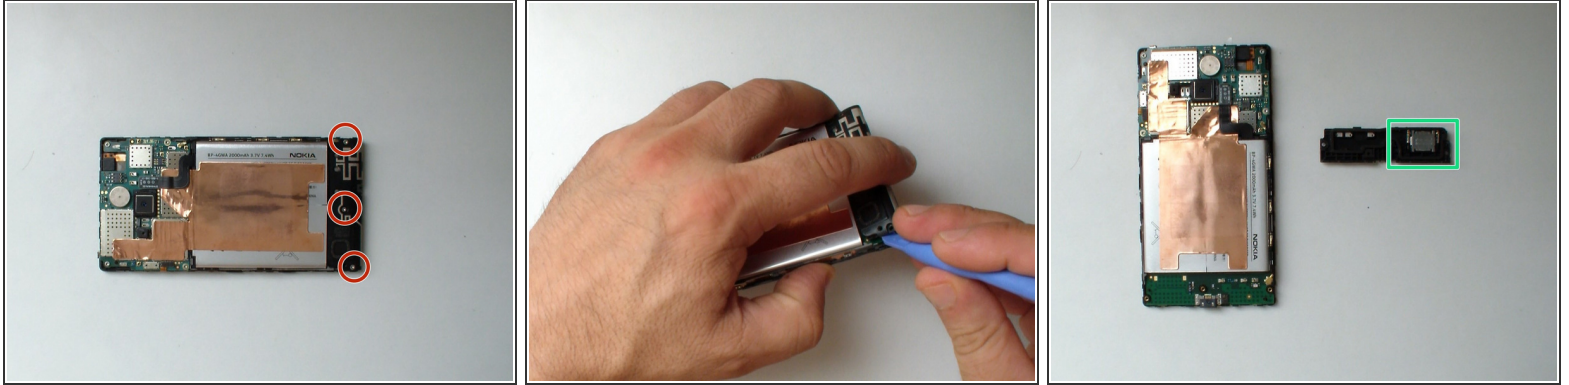

- Remove the 3x Torx T4 screws.
- Buzzer / Loudspeaker

Step 4 — COAXIAL ANTENNA CABLE

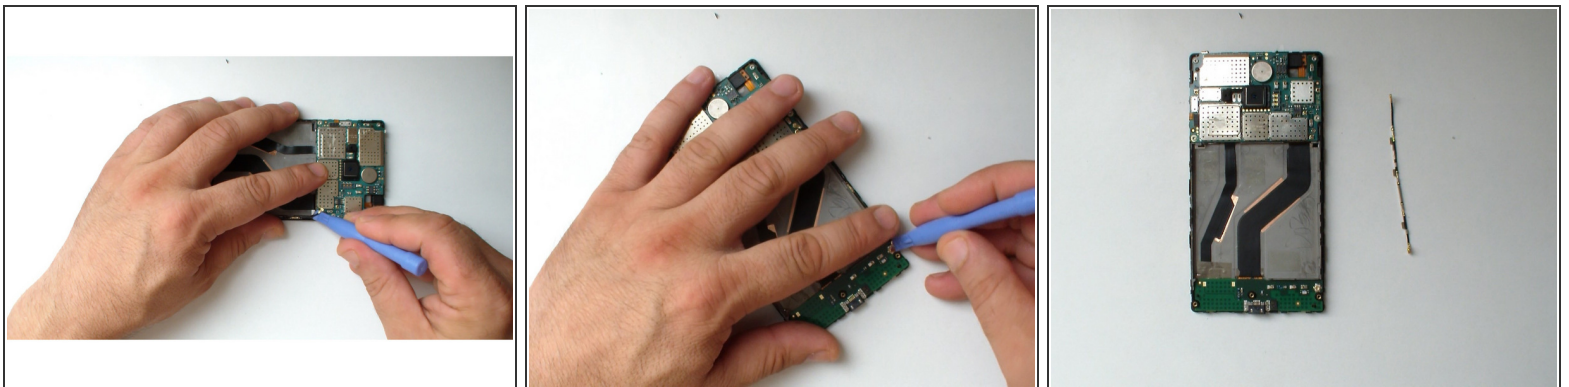

- Disconnect the Antenna cable from the Logic board and from the Charging Dock board and remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-23 11:58:26 AM.